



### **Turn on Chromebook**

To turn on device, you may simply need to plug in the power cord and open the laptop.

If Chromebook doesn't turn on automatically, locate the power button, which may be located on the top-right corner of the keyboard itself.

After turning on the device for the first time, a Chrome logo appears on the screen, and within seconds, the computer powers on and displays the Welcome window.

### **Connect to the Internet**

Select a network to connect to the Internet. If a network is unavailable, hold off on setting up the Chromebook until an Internet connection can be established.

If using a mobile device that can generate an Internet hotspot, it's time to turn on the hotspot.

Follow these steps to connect for the first time:

1. Click the Open the Network drop-down list and select your network name.

Chromebook may detect several other nearby home or business networks. Ignore them.

2. Enter Wi-Fi network password.

After connecting to Wi-Fi network, if applicable, the Wi-Fi bars onscreen fluctuate as your computer tries to connect. After the connection is established, the Continue button at the bottom of the dialog window becomes active.

### **Agree to the Terms of Service**

1. Review the Terms of Service.
2. (Optional) When you're satisfied that you understand and agree to the terms, select or deselect the check box that sends usage stats back to Google.

### **Create Google Account or Login with existing account**

1. Remember username and password.
2. Be sure to logout of account before returning to REOC.
3. Logout by selecting the down arrow icon in the lower right corner of the Chromebook and select sign-out.